# **INSTALLATION MANUAL**

TEST LEVEL-3 FOR 4:1 SLOPES Version 2014.09A





TITLE	SECTION
SYSTEM OVERVIEW	А
BARRIER OVERVIEW	В
BARRIER INSTALLATION	
4:1 SLOPES	С
FOUNDATIONS	D
FITTINGS	E
TENSIONING	F
CHECKLISTS	G
SYSTEM DELINEATION	J
APPENDIX	
DETAILS	L
SOILS	М
REPAIR	Ν
CONTACT	Р

# **INSTALLATION MANUAL**

SECTION A SYSTEM OVERVIEW

INSTALLATION CONSIDERATIONS	2
SITE CONSIDERATIONS	2
HISTORY AND DEVELOPMENT OF THE NU-CABLE SYSTEM	3
CURRENT CONFIGURATION SUMMARY	4
POST SPACING & DEFLECTION CHARTS	6













### INSTALLATION CONSIDERATIONS

## The entire manual should be carefully reviewed prior to construction to ensure proper installation of the Nu-Cable<sup>™</sup> Cable Barrier System.

The Nu-Cable<sup>™</sup> Cable Barrier System is a straight-forward barrier, which is easy to install and can be safely maintained with the information contained within this installation manual.

The initial installation run for any new crew will need to be trained by a qualified Nucor Distributor or Nucor Steel Marion, Inc. representative. It is also strongly recommended that the first run for any new installation crew be completely installed and tensioned before attempting to start other runs.

If there is ever any doubt about a part of the installation contact Nucor Steel Marion, Inc. at (800) 333-4011 or the appropriate Nucor Distributor immediately.

#### Distributor contact information is listed on the last page of the manual.

Nucor is not responsible for any certifications, licensing, or permits, such as environmental impact, that may be required in order to complete installation of this or any roadside safety device.

### SITE CONSIDERATIONS

The initial layout for the Nu-Cable<sup>™</sup> High-Tension System should be free of hazards, obstacles, and debris. The cross-slope should be **4:1, 6:1** or flatter Grading may be necessary.

It is important to note that the high-tension cable barrier cannot be installed within a range of **1' (305mm) to 8' (2.44m)** from the bottom of a median ditch according to FHWA memorandum. The high-tension cable barrier can be installed in the bottom of the median ditch or within a **1' (305mm)** range either side of the median ditch. However, this is not recommended because of potential water drainage issues and poor soil conditions.



### HISTORY AND DEVELOPMENT OF THE NU-CABLE SYSTEM

The Nu-Cable<sup>™</sup> system was originally developed by SafeRoads, LLC in 2002. It was designed around the usage of a Marion Steel 4#/ft Rib-Bak<sup>®</sup> post in a 3-cable configuration. There were three versions of the system: two low-tension and one high tension. The product names were Rib-Bak<sup>®</sup> Cable System, Modified Rib-Bak<sup>®</sup> Cable System & the US High-Tension Cable System, respectively. All of the systems were tested using standard cable (non-"pre-stretched"). The US High-Tension Cable system could also be used with factory "pre-stretched" cable. Due to tensioning and temperature cycles, standard cable exhibits the same performance characteristics as "pre-stretched" cables over time. The ability to use standard cable allows for realization of certain economic benefits during installation & maintenance.

Nucor Steel Corporation purchased Marion Steel and Saferoads in July of 2005. Shortly thereafter, Nucor Steel Marion, Inc. renamed the products '*Nu-Cable™*'. The Nu-Cable™ product line utilizes the same Rib-Bak<sup>®</sup> posts, locking hook bolts and/or hanger, to support the <sup>3</sup>⁄<sub>4</sub>" cable. The cable heights and method of support vary depending the local terrain and desired NCHRP testing level.

The Nu-Cable<sup>™</sup> system has amassed an impressive track record of successfully redirecting errant vehicle since its first installations in Ontario, Canada & Winger, Minnesota in 2003. Nucor Steel Marion, Inc. has continued to develop the Nu-Cable<sup>™</sup> system to meet the needs of its users. The Nu-Cable<sup>™</sup> system can now be used in following applications:

- Low-Tension Applications meeting NCHRP 350 TL-3
  - On 6 to 1 slopes
    - With standard J-Bolts
    - With locking hook-bolts
- High-Tension Applications meeting NCHRP 350 TL-3
  - On 6 to 1 slopes or shallower
    - 4# Rib-Bak<sup>®</sup>Line posts
    - 3 or 4 cables
    - Direct driven, Driven Steel Sockets, or concrete socketed
  - On 4 to 1 slopes or shallower
    - Utilizing a combination of locking hook bolts, hanger & strap.
- High-Tension Application meeting NCHRP 350 TL-4
  - On 6 to 1 slopes
    - Utilizing a combination of locking hook bolts, hanger & strap.

The Nu-Cable<sup>™</sup> system is eligible for reimbursement according to the Federal Highway Administration for use on the National Highway System under the following letters:

#### **BARRIER**

B-96, B-96A, B-167 B-183, B-184, B-184A, B-193

#### <u>TERMINAL</u>

CC-76, CC-105, CC-105A

The NUCOR 4# Rib-Bak<sup>®</sup> U-Channel posts are an acceptable post alternate in the non-proprietary USDOT 3-Strand Low-Tension Cable Barrier system.

### CURRENT CONFIGURATION SUMMARY

There are currently (2) main categories of the Nu-Cable<sup>™</sup> Cable Barrier. This manual covers the layout, components and installation instructions for both systems.

#### A. Test Level 3 Cable Barrier & Anchors

- a. High-Tensioned Cable Barrier for roadways up to 65 mph, in median & roadside applications, using:
  - i. NUCOR U-Channel Line Posts Direct Driven, Concrete Socketed, or Driven Steel-Sockets
  - ii. NUCOR Locking Hook Bolts
  - iii. (3) Strands of 3 x 7 x 3/4" Pre-Stretched or Standard Wire Rope, Field Tensioned for 6:1 or flatter Slope Applications
  - iv. (4) Strands of 3 x 7 x 3/4" Pre-Stretched or Standard Wire Rope, Field Tensioned for 4:1 (Steep) Slope Applications
- b. Various post spacings to fit required design deflection, clear-zone minimums & barrier working width requirements.
- c. Anchorage Options include:
  - i. Cable Release Post (CRP) TL-3 Anchor
  - ii. NU-TEN TL-3 Anchor

#### B. Test Level 4 Cable Barrier & Anchors


- a. High-Tensioned Cable Barrier for roadways up to 65 mph, with large volumes of heavy vehicle (18,000 lb.) traffic, in median & roadside applications, using:
  - i. NUCOR U-Channel Line Posts Concrete Socketed or Driven Steel-Sockets
  - ii. NUCOR Locking Hook Bolts, Cable Hanger & Hanger Strap
  - iii. (4) Strands of 3 x 7 x 3/4" Pre-Stretched Wire Rope, Field Tensioned for 6:1 or flatter Slope Applications.
- b. Various post spacings to fit required design deflection, clear-zone minimums & barrier working width requirements.
- c. Anchorage Options include:
  - i. Cable Release Post (CRP) TL-3 Anchor
  - ii. NU-TEN TL-3 Anchor
- All High Tension Cable anchors are tested to TL-3. Thus a TL-4 Cable Barrier System would only require a TL-3 Cable Anchor.

Both systems and their anchorages conform to Federal Highway Administration NCHRP-350 crashworthiness standards for use on the National Highway System.

912 Cheney Ave. Marion, OH 43301 (800) 333-4011 www.nucorhighway.com	52 1/5, [2+2]	12, [280] 52 1/5, [242] 52 1/5, [242] 52 1/5, [242] 52 2, [275] 52 2, [275] 5		12. [380]
Test Level (NCHRP-350)	TL-3	ТL-3	TL-3	TL-4
Slope Max. (H:V)	6:1	6:1	4:1	6:1
Post Spacing Min.	6' 6" [2 m]	6' 6" [2 m]	6' 6" [2 m]	6' 6" [2 m]
Deflection Min.	6' 6" [2 m]* 5' 2' [1.6 m]† 3' 6" [1.1 m]‡	<b>3' 6" [1.1m]</b> ‡	5' 2" [1.6 m] <sup>†</sup>	4' 7" [1.4 m] <sup>†</sup>
Post Spacing Max.	16' 5" [5 m]* / 20' 0" [6 m]	20' 0" [6 m]	20' 0" [6 m]	20' 0'' [6 m]
Deflection Max.	9' 2" [2.8 m]* 9' 6" [2.9 m]† 5' 8" [1.7 m]≑	5' 8" [1.7m]‡	9' 6" [3 m] <sup>†</sup>	8' 4" [2.6 m] <sup>†</sup>
4# NU-CABLE Post	•	•	•	•
5# NU-CABLE Post	•	•		
Concrete Socket Option	•	•	•	•
Driven Socket Option	•	•	•	•
Direct Drive Post Option	•	•		
CRP Anchor Option	•	•	•	•
NU-TEN <sup>TM</sup> Anchor Option	•	•	•	•
Stretched Cable Option	•	•	•	•
Standard Cable Option	•			
Data based on 320ft (100m) test deck. *Driven 4# NU-CABLE Post		†Socketed 4# NU-CABLE Post	#Socketed 5# NU-CABLE Post Co	Copyright Nucor Steel Marion, Inc. 2009

NUCOR Nu-Cable™ Cable Barrier System

### POST SPACING & DEFLECTION CHARTS

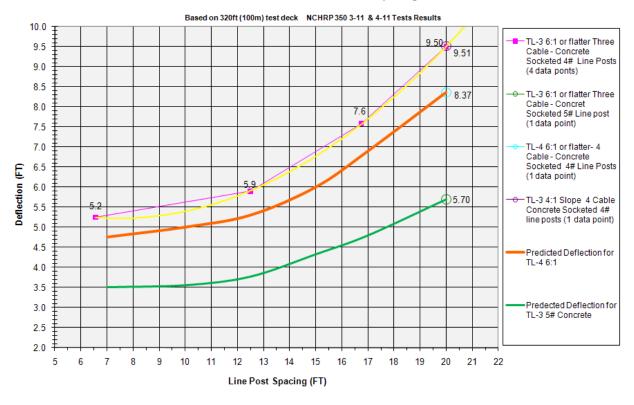

#### **Deflection Relative to Line Post Spacing**

#### TEST LEVEL 3:

The line post spacing can be varied from 6'-6" to 20' (2m to 6m), depending on desired deflection, ranging from 5' 3" to 8' 9" (1.6m to 2.6m).

#### TEST LEVEL 4:

The **line post spacing** is **20' (6m)**, with a resulting deflection of **8' 4" (2.55m)**. Desired deflection under 8' 4" available by reducing post spacing. See *Deflection Graph* above, for more information

Trend lines shown above for the TL-3 & TL-4 systems using alternate embedment options are based on original TL-3 concrete socket testing results.


\*All post spacings were derived from crash testing using a 320' test installation. Actual deflections may vary based upon site variables, installation length and impact conditions.

# **INSTALLATION MANUAL**

SECTION B BARRIER OVERVIEW

LINE POST OVERVIEW	. 2
LAYING OUT CABLE	. 2



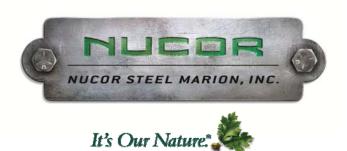

### LINE POST OVERVIEW

A string line should be set to aid in properly placing the posts and cables. Mark each run starting with the location of end treatments. Then mark the position for each cable line post to be installed according to project plans to meet required deflections. Please refer to project plans for job specific post spacing.

Please refer to the project plans and specifications to determine which post spacing is required for the installation. FHWA Memorandum dated July 20, 2007 recommends a maximum post spacing of 15' 0" (4.6m) for all manufactures of cable barriers. Varying post spacing can also be used when necessary due to conflicts with utilities or culverts.

It is helpful to mark every **1000'** (**305m)**\* when laying out the system to aid in turnbuckle placement as the cable is unspooled.

\*Mark every 750' (229m) if using standard cable.

### LAYING OUT CABLE

The cable used in the Nu-Cable<sup>™</sup> system is **3/4**" **diameter (19mm)**, **3x7** construction, galvanized cable. It weighs **0.857 lbs/ft**, and is packaged in **2000' or 3000'** (915m) per wooden reel. The empty reel weighs 260 lbs (118kg). Shipping weight per reel is **2831 lbs (1284kg) for 3000'** reel. Illustrated below are different methods contractors have used to transport and pull cable.



# **INSTALLATION MANUAL**

SECTION C TEST-LEVEL 3 FOR 4:1 SLOPE

LINE POST INSTALLATION	2
CABLE MOUNTING HEIGHTS	2
CABLE-TO-POST CONNECTIONS	3
TL-3 (4:1 SLOPE) CABLE HANGER & HANGER STRAP	4
LINE POST DETAIL	6
SOCKET FOUNDATION TL-3 (4:1 SLOPE)	6
LOCKING HOOK BOLT DETAILS	7







### LINE POST INSTALLATION

The TL-3 (4:1 Slope) system uses a 63" 4# Rib-Bak<sup>®</sup> Line Post.

The TL-3 (4:1 Slope) system is designed for use in concrete-sockets, or drivensockets per project specifications.

The TL-4 (4:1 Slope) system must be located laterally (perpendicular to roadway) 4' 0" (1219) from the breakpoint of the slope. The system is not intended to be used on a slope less than (or flatter) than 4:1.

### CABLE MOUNTING HEIGHTS

The TL-3 (4:1 Slope) system cable heights measured at the middle of the cable are as follows:

	Тор	Upper-Mid	Lower-Mid	Bottom	
Median & Roadside	42 in	38 in	31 in	19 in	
	±1"	±1"	±1"	±1"	
	(1065mm	) (965mm)	(790mm)	(485mm)	

Please see the *Cable Terminal End Installation* details for terminal end cable heights which vary.

### CABLE-TO-POST CONNECTIONS

The TL-3 (4:1 Slope) system uses the NUCOR locking hook bolts to connect the bottom two cables and a cable hanger to connect the upper (2) cables of the system. A hanger strap is to be situated above the top cable.

Insert the special locking hook bolts (pictured below) into the appropriate locations on the line posts to ensure correct cable height and allow them to hang down such that they will accept the cable when it is strung. As the cable is strung, rotate the special hook bolts and attach the nut. Nuts need only be finger-tight, the finished tightened nut will be flush with the threading on the bolt. IT IS NOT NECESSARY TO TIGHTEN THE NUT DOWN TO THE POST. The long hook bolt is used on median applications only.


The cables are located on either the post-face closest to the near-side traffic or the opposite side, depending upon if the installation is for roadside or median applications.


CABLE	POST-FACE		
UPPER		OPPOSITE	
UPPER-MIDDLE	NEAR-SIDE		
LOWER-MIDDLE	NEAR-SIDE		
BOTTOM	NEAR-SIDE		


#### MEDIAN INSTALLATION

CABLE	POST-FACE		
UPPER	NEAR-SIDE		
UPPER-MIDDLE		OPPOSITE	
LOWER-MIDDLE		OPPOSITE	
BOTTOM	NEAR-SIDE		


# TL-3 (4:1 SLOPE) CABLE HANGER & HANGER STRAP

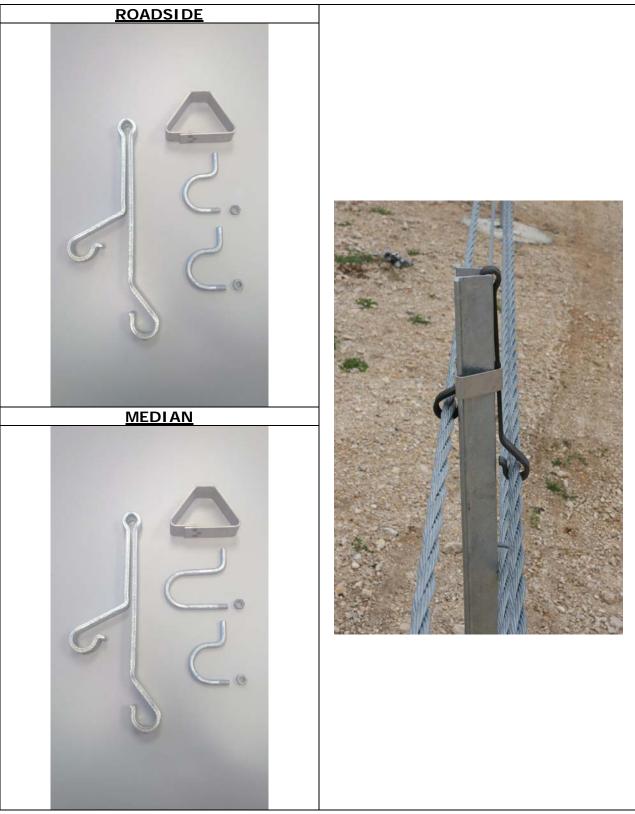


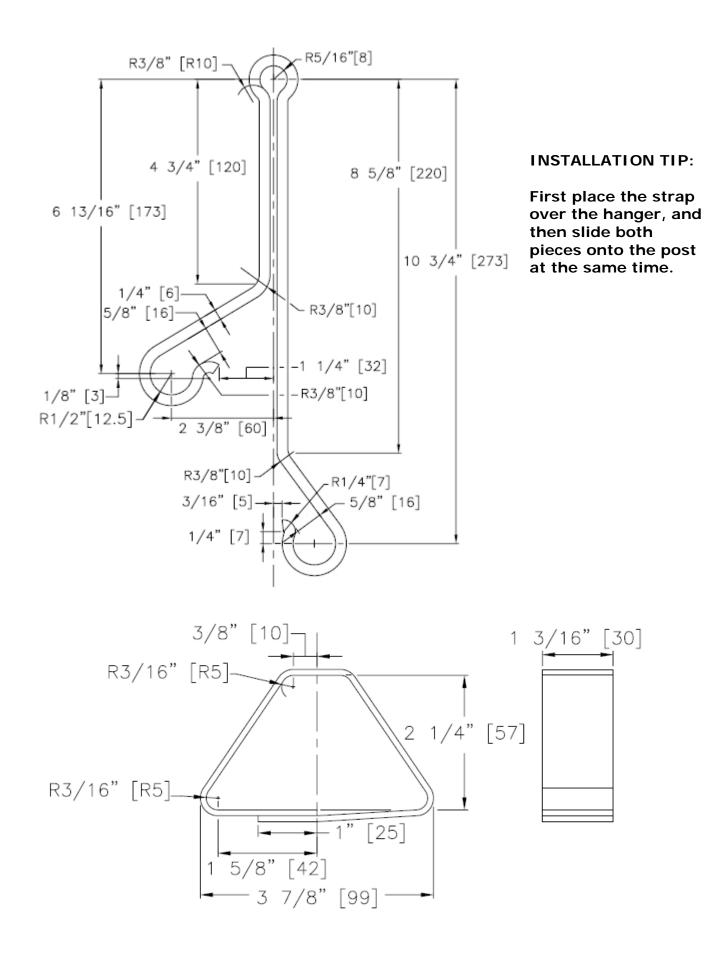

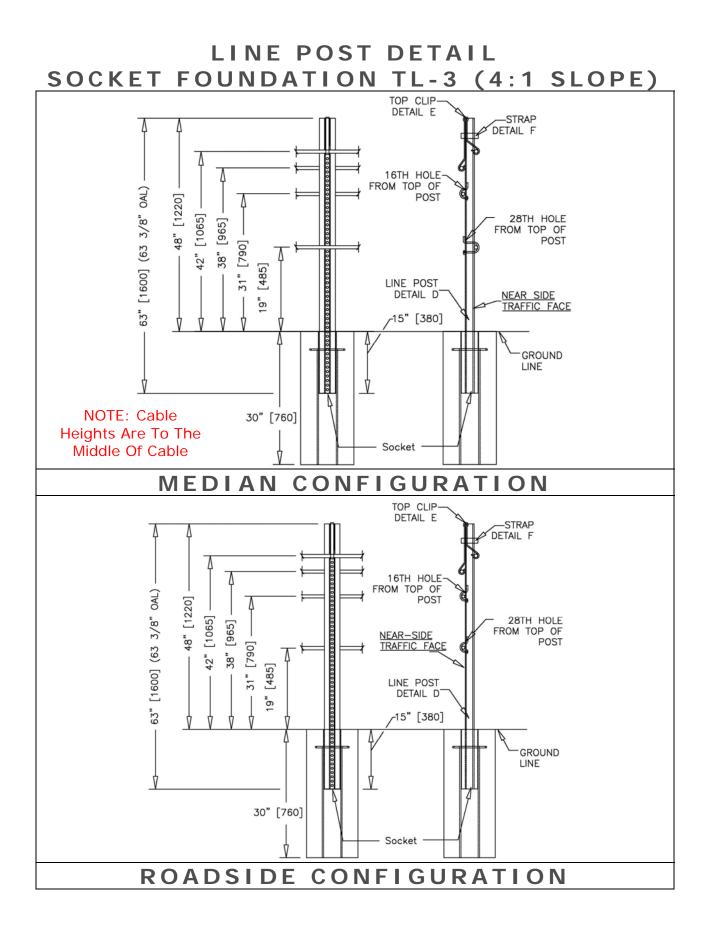

### LOCKING HOOK BOLT DETAILS

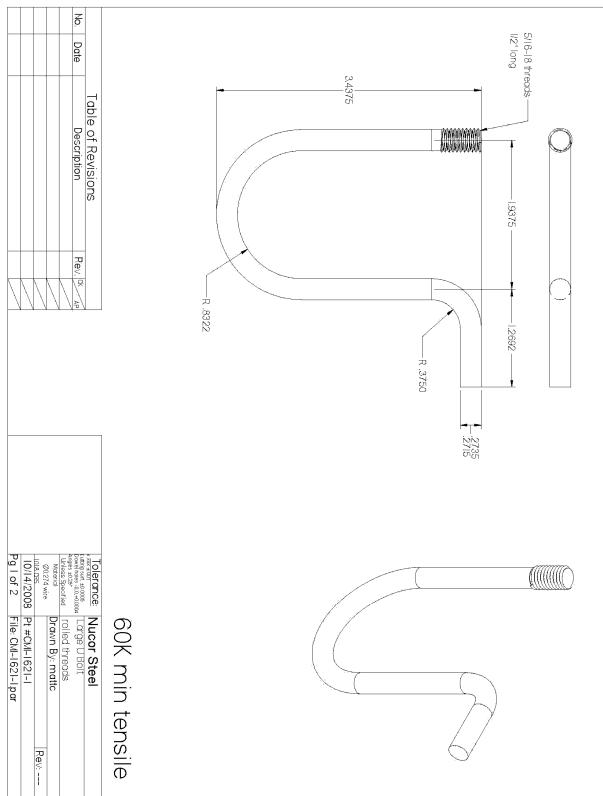

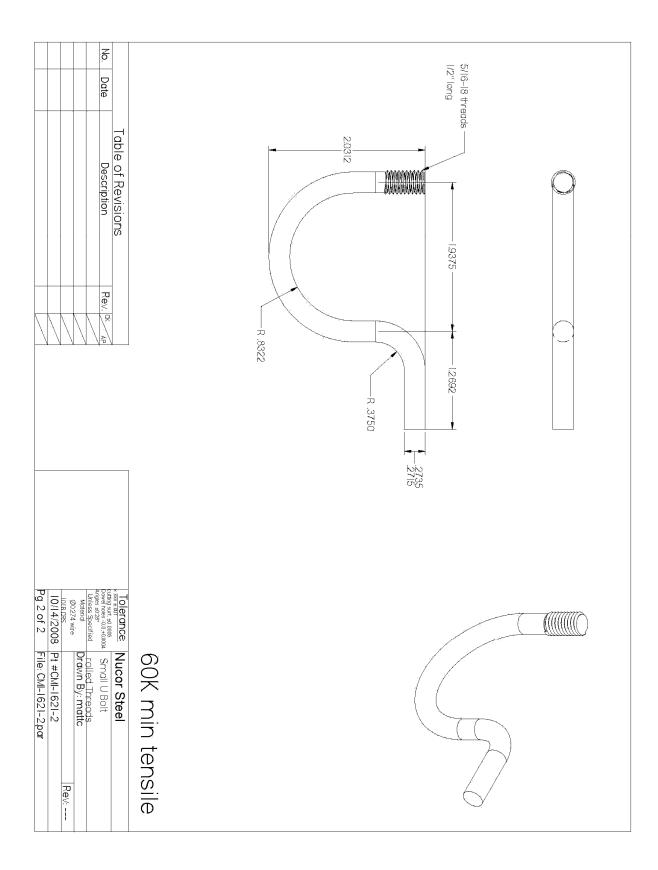

# **INSTALLATION MANUAL**

SECTION D LINE POST FOUNDATIONS

FOUNDATION OPTIONS	. 2
Option 1: Direct-Driven Line Post	
Option 2A: Socketed Foundation, Concrete Footing	3
Option 2B: Precast Socketed Foundation, Concrete Footing	4
Option 3: Direct-Driven Steel Socket	5
UNEVEN TERRAIN	. 7
SOFT SOIL FOUNDATIONS	. 7
DEBRIS EXCLUDER	. 8







### FOUNDATION OPTIONS

CAUTION: The options shown below are examples of typical foundations for use in strong or weak soil conditions. They should not be assumed to be the only options available. If soil conditions at each installation location are unknown or do not meet the minimum requirements for strong or weak soil as outlined in Section M, a geotechnical review by a professional engineer shall be conducted prior to starting installation. The results of this evaluation shall determine foundation design at each installation.

Some states may require deeper foundations based on site conditions and performance needs. Check with your project specifications and details to be sure you are utilizing the appropriate foundation design and depth.

#### **Option 1: Direct-Driven Line Post**

Only TL-3 systems use the direct embedment method. The post used is a 72" (1829mm) Rib-Bak<sup>®</sup> Line Post with no soil plate required. Direct driven line posts are driven into natural soil (NCHRP strong soil) using a preset string line to depth of 39" (991mm). The top of the line post should be 33" (838mm) above ground after installation.



When solid rock is encountered consult the state DOT's recommended procedures for resolution. If the state DOT does not have a procedure for installing line posts installed in rock, drill a 4" diameter hole to accommodate at least 15" of the line post.

For example if first encountering rock at a depth of 12", excavate out the enough material to drill an additional 15" into the rock. Total embedment in this case would be 27".

#### **Option 2A: Socketed Foundation, Concrete Footing**

The socketed method utilizes a steel or plastic socket set into a 12" diameter x 30" deep [305mm x 762mm] concrete footing. The socket depth is assumed to be in NCHRP 350 strong soil.

If rock is encountered which would prevent minimum embedment, please consult the state DOT's recommended procedures for resolution or contact Nucor for further information.



TEST LEVEL 3 & 4
13 GA 4″ OD x 15″
(2.41mm x 102mm x 381mm)

All concrete should be 3000 psi (25MPa) minimum and should cure for at least 7 days before tension is added to system.

The concrete foundation is strengthened with one #3 steel reinforcing ring and two #4 x 28" steel dowels (dowel length may vary upon foundation depth). The ring is inserted to a depth of 4"; the dowels are inserted to a depth of 2". The dowels should be installed at approximately 25 degrees off center so that they are in line against oncoming traffic. The steel reinforcement does not need to be tied.

Use a socket insertion tool (see photo) to install socket after steel reinforcement has been placed. The top of the socket should normally be flush with the top of the foundation concrete. To prevent runoff debris from entering the socket, the foundation should be finished with up to 3/4" (19mm) taper to the outer edge. This may not be required when the system is installed in a mow strip.



#### **Option 2B: Precast Socketed Foundation, Concrete Footing**

The precast line post socket follows the same detail as the standard socketed concrete footing.

Use a **12**" **diameter x 30**" **deep** [305mm x 768mm] form. Some contractors have found that modifying a standard section of **12**" steel culvert pipe works well as a reusable form. Place steel reinforcement as detailed on plan standard. Plumb posts and pour concrete.

Be sure to not leave more than 1" (25mm) of the line post socket exposed above the ground line. It is easier to plumb the line post socket with a post temporarily inserted in the socket. The back fill material needs to be strong soil compacted in 6" (153mm) lifts with a hydraulic tamper.



When solid rock is encountered consult the state DOT's recommended procedures for resolution. If the state DOT does not have a procedure for installing concrete piles in rock, drill a 12" [304 mm] diameter hole to accommodate the full depth and width of the precast foundation.


#### **Option 3: Direct-Driven Steel Socket**

Much like the direct driven post option, there is a direct driven-steel socket option that can be fitted for post-driving machines and does not require the use of any concrete. This socket allows for the use of a shortened post.



When solid rock is encountered consult the state DOT's recommended procedures for resolution. If the state DOT does not have a procedure for installing line posts installed in rock, drill a 4" [102mm] diameter hole to accommodate at least 15" [381mm] of the line post.

For example if first encountering rock at a depth of 15" [381mm], excavate out the enough material to drill an additional 15" [381mm]into the rock. Total embedment in this case would be 30" [762mm].

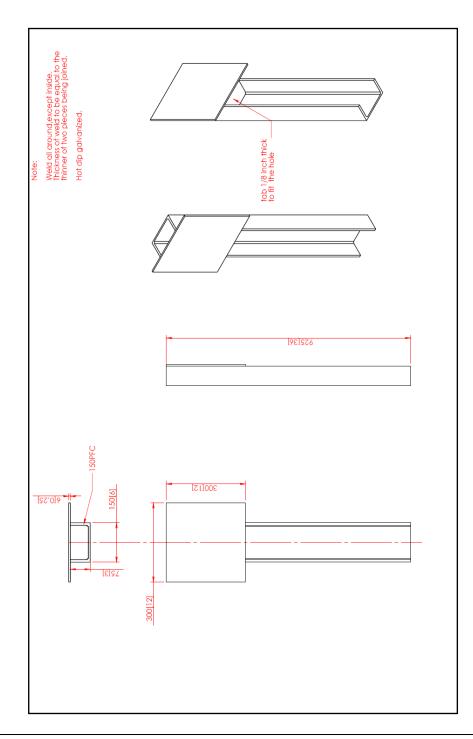

For uneven terrain where the potential exists for line posts to be pulled out of their sockets by the tensioning of the cable, remove a shovel full of material around socket, drill a 3/8" (10mm) hole as close to the base of the footing as workable to install a  $5/16" \times 1 \frac{1}{4}"$  (8mm) Grade 5 or better bolt to hold the post in place.

### UNEVEN TERRAIN

For uneven terrain (see picture below), where the potential exists for line posts to be pulled out of their sockets by the tensioning of the cable, set the socket in the concrete with no more than 1" (25mm) above ground level. After concrete has set, drill a 3/8" (10mm) hole as close to the base of the footing as workable. Install a  $5/16" \ge 1 \frac{1}{4}"$  (8mm) Grade 5 or better bolt through the post to hold the post in place.



### SOFT SOIL FOUNDATIONS

Refer to local guidelines for foundation requirements in soft soil conditions.

In many cases with line post foundations in weak soil, or where the frost line is below **30**" (762mm), the footing should be increased in the depth to accommodate local soil conditions. Some states have successfully utilized 18" diam. (457mm) x 36-48" (914-1219mm) concrete foundations.

Direct-driven steel sockets can be increased in depth to 48" (1219mm) in order to accommodate local soft soil conditions.

Direct drive posts can be increased in depth, in 6" (150) increments, in order to accommodate local soil conditions.

### DEBRIS EXCLUDER

Optionally required based on project specifications to help prevent collection of dirt and debris within the foundation socket.



# **INSTALLATION MANUAL**

SECTION E

CABLE FITTINGS & TURNBUCKLES

TURNBUCKLES
FIELD APPLIED CABLE ATTACHMENT AND WEDGE ENCASEMENT 3
WEDGE INSTALLATION 4
FACTORY OR FIELD-APPLIED SWADGED FITTING
SYSTEM SPLICING5
DETAILS




### TURNBUCKLES

Turnbuckles are used to achieve the appropriate tension in the system. By using pre-stretched cable, turnbuckles are required to be installed every 1000' (305m). If pre-stretched cable is used, the hardware must be 1"D (25mm) to approach the breaking strength of the cable. Note: More turnbuckles than the minimum amount may be used if conditions require this option. Some maintenance crews have successfully used turnbuckles in place of cable splices.

In a TL-3 system, if using standard cable, install one turnbuckle per cable every 750' (229m). When using standard cable, the attachment hardware may be  $\frac{3}{4}$ " (19mm) or 1" (25mm) diameter. If the length of the run is 750' long (229m), install the turnbuckle near the middle.

There are two options for the turnbuckle style used. The Nu-Cable<sup>TM</sup> system can either be installed with:

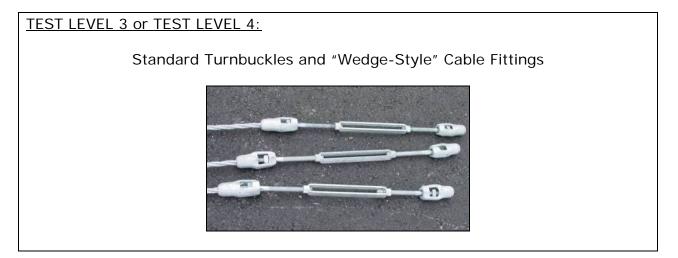

It is not recommend putting turnbuckles directly above each other in the same section between two line posts (bay). They will be easier to tighten if they are

staggered. If a turnbuckle becomes positioned at a post, do not install a special hook bolt at this post. This should be allowed for only one cable per post. If a maintenance crew strongly desires to place all of the turnbuckle in the same bay, the result will have no



adverse effect on the crash worthiness of the system.

### FIELD APPLIED CABLE ATTACHMENT AND WEDGE ENCASEMENT

Cable attachment hardware requires the wedge to be properly encased in the cable strands and seated into the casting to insure that the cable will not slip out of the hardware.

• The wedge must be seated into the cables such that the flutes in the wedge nest with the three x strands of the cable. If not properly aligned cable slippage is possible.



• The optimum seating for the wedge is such that there is 1" of cable is beyond the wedge. At a minimum, the wedge must be seated inside the cable strands such that the top of the wedge is flush with all three 7 x strands. If one strand of the three 7 x strands is not at a minimum flush, then the wedge needs to be reset.

Wedge not protruding from casting Max allowable 1/4"	ST BE		Wedge Should Not Extend beyond end of casting by more
LT & CAR			than 1/4"
	4	L	
Wedge insta	lled inside cable		en Zuiter
Strands	A PARTY AND A PART		Car III


- If slippage between the wedge and strands occurs reset the wedge deeper into the strands.
- It is acceptable for the wedge to protrude up to 1/4" from the bottom of the casting as long as the wedge has been seated properly. If the wedge protrudes more it must be reset.

During the initial installation process the three 7x strands should be set in the body of the casting such that the nut has just enough room to be inserted. This will help ensure that the wedge is seated below the three 7x strands.

### WEDGE INSTALLATION

- Some contractors choose to use a screw driver to open up the cable and separate the three 7 x strands in preparation for wedge insertion. Once the wedge is inserted into the cable it should be driven approximately 1 inch below the end of the cable.
- 2. Other contractors have chosen to insert the cable into the casting and twist the casting until the strands "pop open" inside the casting opening up the cable lay. The wedge is inserted into cable strands approximately 1 inch below the end of the cable. The casting is then twisted back so that the cable lay is returned to the initial position.
- 3. Other installation methods are acceptable as long as the wedge placement & cable engagement is correct.

### FACTORY OR FIELD-APPLIED SWADGED FITTING

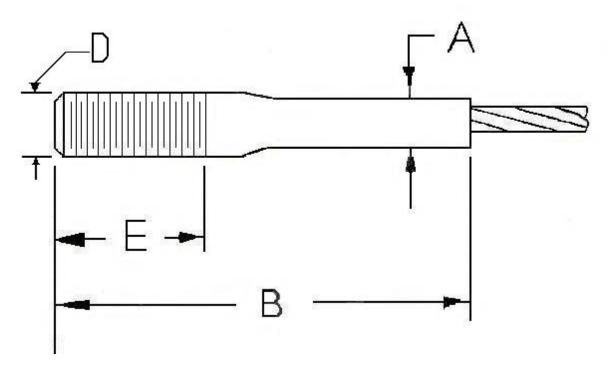

\*NUCOR does supply the field swadging equipment, which may be available through various rental companies. Use of factory applied swadged fittings will require exact measurements of run lengths prior to fabrication. Be sure to compensate for variations in curvatures, and anchor post spacings, when measuring distances within a run. Cables will be delivered with tagged and numbered spools for installation at a specific location.

### SYSTEM SPLICING




The use of a cable splice is not recommended in the Nu-Cable system. A turnbuckle should be used wherever cable sections are connected. As inspection of a cable coupling is hindered by the closed body design of a standard splice, use of a turnbuckle is strongly encouraged.


However, if needed due to odd cable lengths or for other unforeseen repair or maintenance situations,

a standard splice may be used in lieu of a turnbuckle.

### STANDARD TURNBUCKLE

#### SHOWN WITH 1" THREADED ROD

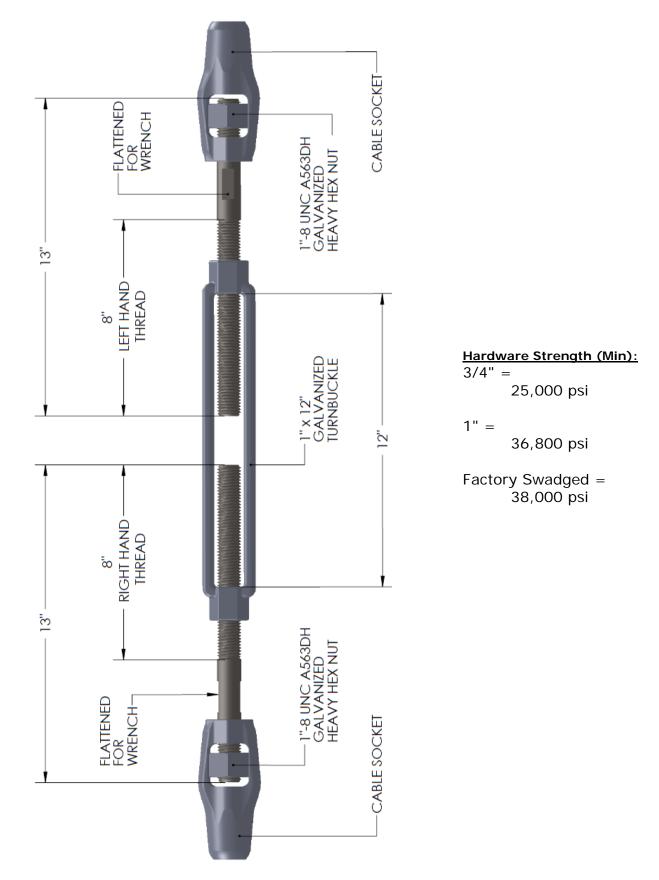

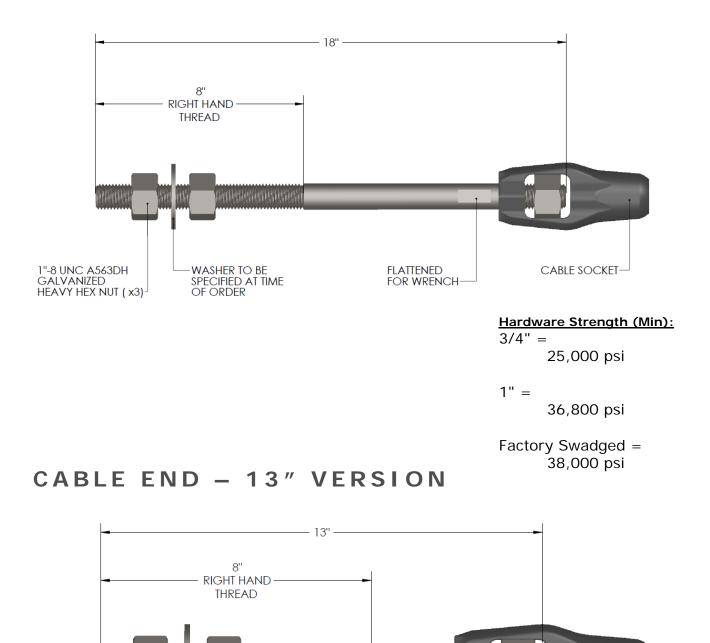


1"-8 UNC A563DH GALVANIZED

HEAVY HEX NUT ( x3)-

WASHER TO BE SPECIFIED AT TIME OF ORDER -Flattened For Wrench CABLE SOCKET

### CABLE SPLICE

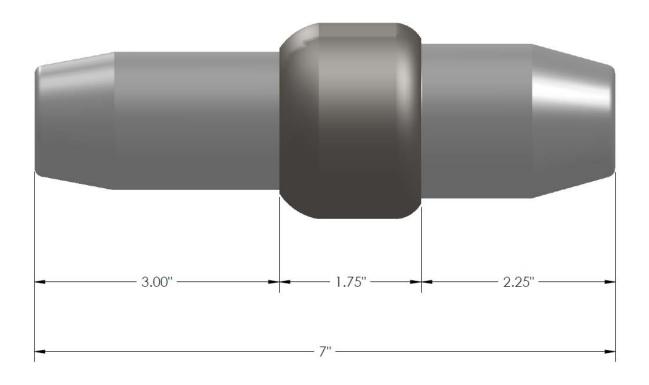

### CABLE WEDGE FITTING




# **INSTALLATION MANUAL**

SECTON F SYSTEM TENSIONING

TENSIONING THE SYSTEM	
Tensioning Considerations	3
Best Practices:	3
Tensioning Turnbuckles	4
Tension Table	5
Tension Log – 3-Cable Systems	6
Tension Log – 4-Cable Systems	7





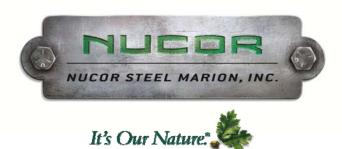

### TENSIONING THE SYSTEM

#### Tensioning Overview

## Caution: During tensioning, have safety plan in place to release tension in the event of an emergency.

The last step is setting the proper cable tension by using the turnbuckles. The cable tensioning process is a dynamic process. Regardless of the cable type (pre-stretched or standard) when the cable and cable attachment hardware are brought up to the appropriate tension the following process will occur:

- Cable and wedges will be seated into the cable hardware for the turnbuckles, cable anchor ends, and splices.
- Cable can temporarily "hang up" on hook bolts or posts creating "pinch" points. A pinch point is defined when there is difference is cable tension between cable bays. Over time the cable tension will over come these "pinch points" and be normalized over the entire run.
- If a pinch point is recognized it can be manually released by adjusting the hook bolt to allow the cable to freely move. Pinch points may become visually evident when a line post is out of plum or a hook bolt is bent.
- Over time the fact that the cable is under tension will in itself remove the construction stretch from the cable.
- Time under tension will also physically change the cable in a fashion similar to yield hardening. This process will occur more with standard cable then pre-stretched.

Each of these processes will cause the cable to physically lengthen. Cable lengthening will cause the initial tension to decrease. Because these processes are dynamic it may take a number of temperature cycles/changes of season before the cables consistently hold tension. Longer runs may take more time for this process to occur than shorter runs. The use of pre-stretched cable will decrease the number of temperature cycles to get cable to hold tension, but its use will not eliminate the processes above from occurring. Vehicle impacts may aid in this stabilization process to some degree too.

The amount of tension in the cable barrier will affect system performance. The cables should be tensioned to the values given in the Tension Table, based upon the temperature of the cable. The tension in the cables will vary with ambient temperature changes.

### **Tensioning Considerations**

If using standard (non-prestretched) cable, the initial tension on a new cable installation should be approximately 15% higher than the desired tension indicated in the temperature/tension table below, to allow for cable "creep." The tension tolerance is + 15-20% or up to 2500 lbs. over desired tension maximum. Most tension meters have an accuracy of about 200-300 lbs. The system should be checked 2 weeks to 3 months after installation, and then periodically over the first year, especially after seasonal changes.

After a significant impact it is recommended to check the tension. Also, check tension if an impact occurs close to an end terminal.

If tension needs to be taken up, make sure that at least 6"-12" of throw is left on the turn buckles. This may require that some length of the cable is removed. Cable should be removed adjacent to any of the attachment hardware (turnbuckles, cable anchors or cable splices.) The attachment hardware can be re-used.

Once a cable has been in service for approximately one to two years, there is no need to use the 15% creep factor after the cable has stabilized.

#### **Best Practices:**

- All cables must be checked.
- If a run is between 100ft and 1500ft Check tension once at the mid-point of each cable.
- If a run is between 1501ft and 2500ft Check tension twice at one-third of the length from the end treatment of each cable.
- If a run is greater than 2501ft Check tension at three points in the run: <sup>1</sup>/<sub>4</sub> of the length from each end treatment and at the mid point of the run for each cable.

Note: If at any point, the tension varies greater than 5%, additional tension checking needs to be done to determine where the cables are hung-up or "pinched", and a repair may be necessary.

#### **Tensioning Turnbuckles**

It is best to use a "cable pull" to get the majority of the tension into the system. Attach the cable pull to a suitable vehicle (truck, skid steer, etc.), pull the cable taut, install the cable end, and attach to the CRP. An alternate method is to attach both cable ends to the CRPs and make the final connection at the turnbuckles.

When using a hydraulic puller, tension the system, install the turnbuckle, and release the hydraulic puller. Plan to pull approximately 1' per 1000' from taut to approximately 6000 pounds tension.



Vehicle Cable Pull



Hydraulic Cable Pull



Pneumatic Cable Pull


Instead of relying on torquing the nut on the threaded rod to compress the turnbuckle, these tools pull the cable and fittings together into the turnbuckle, allowing for easier and faster connections.

When the appropriate tension is reached, the nuts are then spun down to the bottom of the threaded cable end fittings, thus setting the turnbuckles at the correct position.

The final tension is achieved by tightening the turnbuckles. *The tension should be checked between every turnbuckle to ensure proper tension has been met throughout system.* 



Be sure to leave a minimum of 6" of clear throw in each turnbuckle after tensioning. Do not "bottom out" the turnbuckles during initial installation.

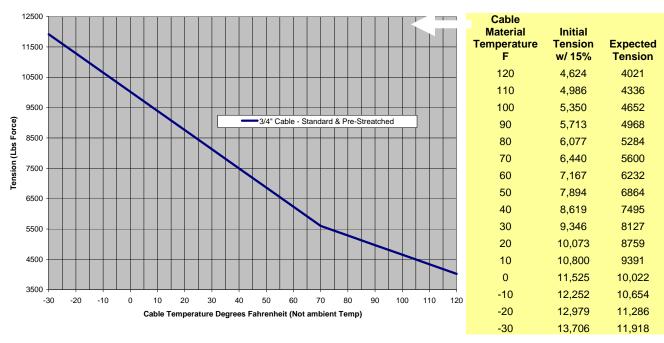

#### **Tension Table**

The nominal minimum tension for the system, per cable, is 5,600 lbs. (25 kN) at 70°F (21°C).

After one year, the system should be tensioned per the table above. When the cables are properly adjusted, the cables will maintain acceptable tension over expected temperature ranges. Tension should be checked annually as a part of a standard maintenance schedule.

A Tension Log Sheet is provided in the Appendix for accurate record keeping. It is recommended that the contractor and DOT keep accurate, signed records of tension for any future reference.

Date:				ising standar	d (non-presu	retched) cable, the initial tension on a	120	4,021
Project I.D. # Installer:			er allo	new cable installation si desired tension indicate allow for cable "creep." The tension tolerance is tension maximum.	llation should indicated in t 'creep." rance is +15 im.	new cable installation should be approximately 15% higher than the desired tension indicated in the temperature/tension table below, to allow for cable "creep." The tension tolerance is +15 to 20% or up to 2500 lbs. over desired tension maximum.	110 127 100 115 90 104 80 92 70 81 60 69	4,336 4,652 4,968 5,600 6,232
Installer:			a de de	The system sho and then period changes.	uld be check ically over th	The system should be checked 2 weeks to a month after installation, and then periodically over the first year, especially after seasonal chances.	30 30 30	0,004 7,495 8,127 8,759
			6.2	to need to us	is been in ser	one a cable has been in service for approximately one year, there is no need to use the 15% creep factor.	+++++	9,391 9,391 10,654 11,286 11,918
Recommendations: Date Cable Temp Date Cable Temp Date Cable Cab		Bottom Cable Bottom	oids5 Tension	Paceved Replaced	Posts Posts	Notes:	Initials:	
30 days after insta?								
6 to 8 months								
At 1 year								
1.5 Jaaes								
After any Accident or repair								
Alther any Accident or repair								
After any Accident or repair								
Allow any Accident of repair								
After any Accident or repair								
Alther any Accidents or repair								
After any Accident or repair								
Afther any Accident or repair								
After any Accident or repair								
After any Accident or repair								
After any Accident or repair								
Alther any Accident orrapair								
Allier any Accident orrepair								
After any Accident or repair								
Afther any Accidents of repair								
<sup>Metes.</sup> Please reference temperature chart for correct tension settings. Please note any changes & repairs in the notes section (attach accident report & pictures if possible).	pictures if po	ssible).						
Hardware and post inspections are visual please put check mark in appropriate box.	ox.							

### Tension Log – 3-Cable Systems

NUCOR Nu-Cable™ Cable Barrier System Barrier Installation: Tensioning

v. 2014.09A Page F-6

The international and another anot	NUC	OR S	NUCOR STEEL MARION INC.	MA.	RION	INC.						lf using constant on bla from "non-stratched") in the TLS costern the			
Diff      Diff        Instance:      Instance        Project 10 *      Instance        Instance:      Instance        Instance: <td><u>NL-CAB</u></td> <td>LE TL-3</td> <td>: 4-CAB_</td> <td>E &amp; TL-4</td> <td>4-CABL</td> <td>E TENSIO</td> <td>N LOG SHE</td> <td>티</td> <td></td> <td></td> <td></td> <td>in tasking search or date (not in severe task) in the incention should be approximately 15% initial tension on a new cable installation should be approximately 15% higher than the desired tension indicated in the table to allow for cable "creep".</td> <td>Cable Deg. F 120 110</td> <td>15% 1 Higter 138 127</td> <td>1ension LBS 4,021 4,336</td>	<u>NL-CAB</u>	LE TL-3	: 4-CAB_	E & TL-4	4-CABL	E TENSIO	N LOG SHE	티				in tasking search or date (not in severe task) in the incention should be approximately 15% initial tension on a new cable installation should be approximately 15% higher than the desired tension indicated in the table to allow for cable "creep".	Cable Deg. F 120 110	15% 1 Higter 138 127	1ension LBS 4,021 4,336
Totality    Lotation      Priori UD #			Date:									The transition to be and the month of the mo	0 <mark>0</mark> %		4,652
Plant ID #      Importance:		Lo	ication:									Ine tension to lefance is ≁is to ∠u%o, or up to ∠cuu p.s. ower desire c tension maximum.	30	-	5,284 5,600
ere terrorer and the active for a status a server and the act of the processing status and the act of the status and the act of the status and the status in a screptilate status in a screptine status in a screptilate status i	ŝ	Project	tID.≢.							i		The system should be checked every 2 weeks to a morth after	30 30 40		6,232 6,864 7.495
Image: Section of the state in actronation of the state in action i	nis Please ref	erence ter	mperature c	hert for co airs in the	irrect tensic	on settings. on (attach ac	rident report & r	virt tres if mossib	9			installation, and insir feriodically over menificitiyear, especially after seasonal changes Once a cattle ta's seen in service for ascroximately one vear, there is no	20 20 20 20 20 20	5 53 62 c	8,127 8,127 9,391
Image: Second	Hardware	and post i	inspections	arsvisual	and note	status in appr	cpriate box.		ĩ			need to use the ' 5% creep factor.	-10 -20		10,022 10,654 11,286 11,918
	Inspecti Schedu					Upper-Mid Jable Temp.		<u> </u>	Lower-Mid Cable Tension	Bottom Cable Temp.	Bottom Cable Tension	Notes	Hardware Replaced?	Posts Replaced & Count	Initials
20 Suys sider    1    <	Insialation	2													
64 Niccritis    Alt    36 Niccritis    Alt    Al	30 Days A	ller													
Mt    Jaser    Mt    Jaser    Mt    Jaser      Mt    Systems    Mt    Mt    Mt    Mt    Mt      Mt    Systems    Mt    Mt    Mt    Mt    Mt      Mt    Systems    Mt    Mt    Mt    Mt    Mt    Mt      Mt    Systems    Mt	6-8 Nionth	s													
If ( 5) Spaces    If ( 5) Spaces      If ( 6 + Spaces)    If ( 6 + Spaces)      If ( 6 + Spaces)	At 1 year														
How Fayesis    How Fayesis    How Fayesis    How Fayesis    How Fayesis      How Fayesis    How Fayesis    How Fayesis    How Fayesis    How Fayesis      How Fayesis    How Fayesis    How Fayesis    How Fayesis    How Fayesis      How Fayesis    How Fayesis    How Fayesis    How Fayesis    How Fayesis    How Fayesis      How Fayesis	At 1.5yea	S													
Alter Flocasi    Alter Flocasi<	After Repa	air B													
After Rayasir      After Ra	After Reps	zić													
After Flyciair      After F	After Repo	2.Ê													
Mitor Flogasit      Mitor F	After Repa	2.k <sup>2</sup>													
After Posseir    After Posseir<	After Repa	9.k <sup>°</sup>													
After Figuesic    After	After Repa	P.K													
After Fagesic    After Fagesic<	After Reps	ziř													
After Fagesic    After Fagesic<	After Repa	2.k													
After Fagesit    After Fagesit    After Fagesit    Images from the fages f	After Repa	2.k													
After Faguasi    After Faguasi	After Rep	2.k													
After Fagzaki    After Fagzaki	After Rep	ak'													
After Regear    After Regear    After Regear	After Repe	2.k													
After Rejeait  After Rejeait	After Rep	ak'													
After Rejeaix  After Rejeaix    After Rejeaix  After Rejeaix    After Rejeaix  After Rejeaix    After Rejeaix  After Rejeaix	After Rep	2.4													
After Rejceix Af	After Repe	air													
After Rejzek After	After Rep	9.1													
After Receix	After Rep	9.k													
After Receiv	After Repa	9.K													
	After Repa	air.													

### Tension Log – 4-Cable Systems

## Nu-Cable<sup>™</sup> Cable Barrier Systems

## **INSTALLATION MANUAL**

SECTION G

BARRIER INSTALLATION CHECKLISTS

INSTALLATION CHECKLIST	. 2
------------------------	-----



### INSTALLATION CHECKLIST

- □ Are all the cables positioned at the correct height?
- □ Are the cables properly tensioned?
- Are there irregular curves or joints where an errant vehicle might snag?
  Is there evidence of corrosion or damage to the cable? The cable should be scheduled for repair if either of these circumstances exists.
- □ Check to see that nuts are installed on the special locking hook bolts.
- Check that there is enough thread at the cable connections to allow for future tensioning or repairs.
- Is there sufficient soil behind the posts to prevent them from being pushed out when the barrier is hit? Eroded or disturbed soil should be replaced and compacted.
- □ Is the post spacing correct?
- □ Is there evidence of corrosion or damage to the posts? The posts should be replaced if either of these circumstances exists.

#### TEST LEVEL 3 4:1 SLOPE & TEST LEVEL 4:

- □ Has the quick-release clip been installed properly at the top of the post?
- □ Has the clip retainer strap been installed over the quick-release clip?
- □ Is the grading and slope appropriate for the system to be installed?
- □ Is the grading consistent and has been completed correctly?
- □ Are there any storm drains, culverts or other obstructions that could interfere with the barrier?
- Is there anything in front of the cable barrier that might cause a vehicle to vault the barrier or make the barrier ineffective? Items to look for include vegetation, rough ground, debris, or hard packed snow. These items should be removed if present.
- Is there enough clearance between the barrier and the hazard for the expected barrier deflection? Minimum clearance is dependent upon post spacing.

TEST LEVEL 3 - 4:1 Slope:

- □ Has the system been located 4' 0" (1219mm) from the break of the slope?
- $\Box$  Is the slope 4:1?

## **Nu-Cable**<sup>®</sup> Cable Barrier Systems

# INSTALLATION MANUAL

SYSTEM DELINEATION

DELINEATION	2
POST CAPS	3




### DELINEATION

System delineation is not typically supplied with the Nu-Cable® barrier system due to the wide variety of delineation specifications between states. Delineation should be installed as directed by the engineer.

The bonding surface must be relatively clean and dry. Contaminated surfaces should be cleaned with a 50-50 Isopropyl Alcohol and water mixture. Use a lint-free cloth. Substrate temperature must be above 50 degrees F for proper adhesion.

Primer should be shaken well before using. Apply a thin, uniform coating to the bonding surface using the minimum amount that will fully coat the surface. Allow to dry completely before applying tape.


Remove backing from pressure-sensitive reflective sheeting and apply pressure by rolling or rubbing to ensure good contact.

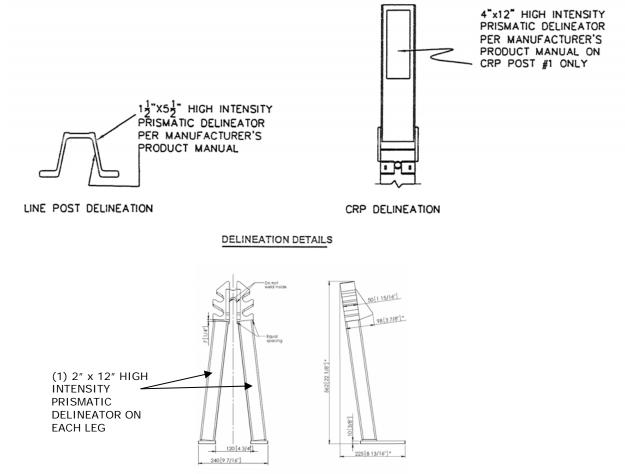

NU-TEN TRIGGER POST

### POST CAPS

Optionally required based on project specifications.

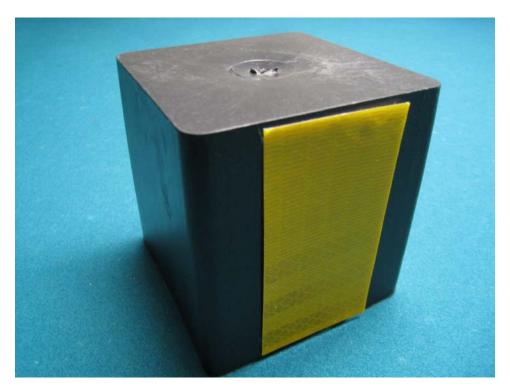

The Nu-Cable systems that only use hook bolts (TL3 - 3 or 4 cable for 6:1 slopes) have the line post firmly inside the center grooves of the cap.





The Nu-Cable systems that use hangers and straps (TL3 for 4:1 slopes or TL4 for 6:1 slopes) have the line post inserted all the way to the top of the cover utilizing the top grooves.





Adhesive is optional for securing the caps to the line posts.

## Nu-Cable<sup>™</sup> Cable Barrier Systems


## **INSTALLATION MANUAL**

SECTION L APPENDIX: SYSTEM DETAILS

TL-3 SYSTEMS	2
TL-4 SYSTEMS	3




### TL-3 SYSTEMS

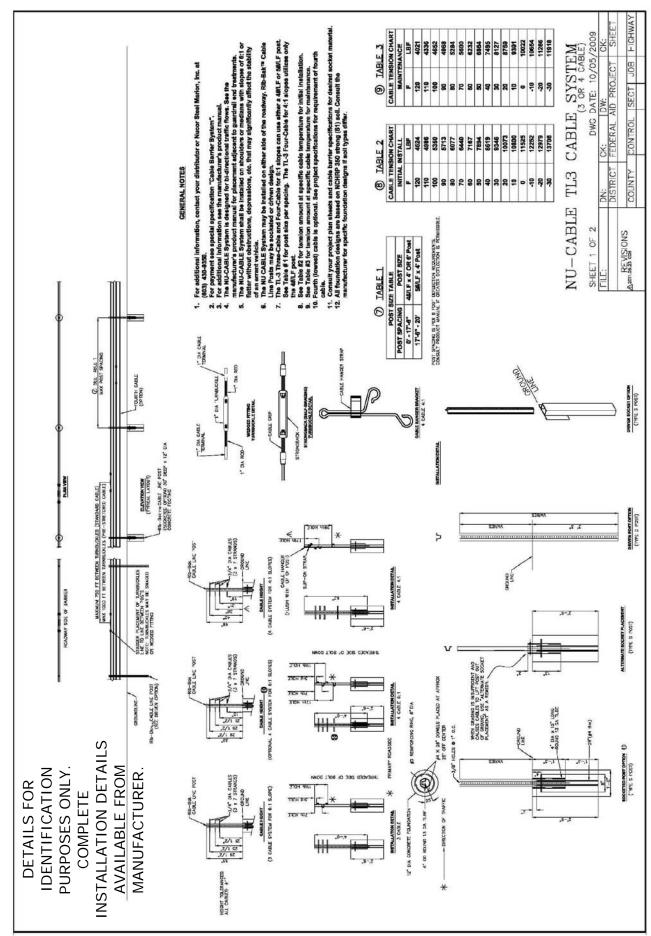

NUCOR Nu-Cable™ Cable Barrier System

### TL-4 SYSTEMS

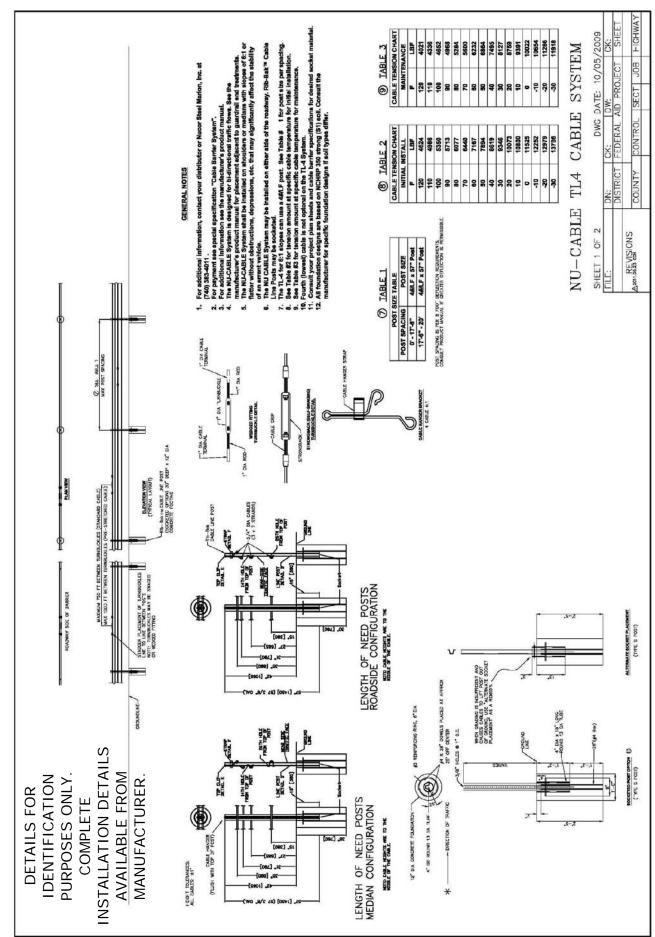

NUCOR Nu-Cable™ Cable Barrier System

## Nu-Cable<sup>™</sup> Cable Barrier Systems

## **INSTALLATION MANUAL**

SECTION M

APPENDIX: TESTING SOIL CONDITIONS

SOIL TESTING 2
----------------



### SOIL TESTING

This section includes information relevant to determining the soil density & conditions at a specific location. The processes and steps listed here are referenced throughout the manual to determine installation modifications to the system foundations required in order to maintain performance in weak, or soft, soils.

CAUTION: The options shown below are examples of typical foundations for use in strong or weak soil conditions. They should not be assumed to be the only options available. If soil conditions at each location are unknown or do not meet the minimum requirements for strong or weak soil as outlined in Section M, a geotechnical review by a professional engineer shall be conducted prior to starting installation. The results of this evaluation shall determine foundation design at each location.

In order to verify site soil as a particular soil using a DCP (Dynamic Cone Penetrometer) or SV (Shear Vane), please reference the following table and instructions:

Cohesive Soils	
Description Su (kpa)	Foundation Pile Depth
	NU-CABLE LINE POST
50 - 75	450mm ø x 900-1200mm (18"ø x 36-48")
	*(As Specified Per Project Engineer)
76 - 125	300mm ø x 750mm (12"ø x 30")
Cohesionless Soils	
Description Phi (0)	Foundation Pile Depth
30 – 41	450mm ø x 900-1200mm (18"ø x 36-48")
	*(As Specified Per Project Engineer)
>41	300mm ø x 750mm (12"ø x 30")
•	Table 4

Table 1

- Purchase the DCP equipment.
- Purchase the ASTM publication ASTM STP 399 (available at the ASTM website) that describes the test procedure
- Submit that to the state or project engineer to make sure the tool is acceptable to them.
- The manual shows a curve that correlates the blow count from the DCP to a Standard Penetration Test (SPT) blow count. For native soil, a blow count of 15 (DCP) is equivalent to a Standard Penetration Testing (SPT) blow counts of 10 blows per foot.
- Once the SPT blow counts are known, we can use them to calculate the undrained shear strength (Su) of the cohesive soil as follows:
  - Su (kPa) = Converted SPT blow count x 5 this is the units included in the NU-TEN manual
  - Or
  - Su (ksf) = Converted SPT blow count /10
- If the blow count in the field is less than 15, then the foundations will have to be increased because the soil will not qualify as stiff.
- Need to make sure whoever runs the test out in the field is familiar with the procedure. It is very easy to make a mistake about procedure of using this particular tool. Whoever performs the test in the field will have to assume responsibility for the results.
- The test should be performed in one-foot intervals down to the design bottom elevation. We are interested in the strength of the soil above (at depths of 0, 6 inches, and 2 feet) the bottom elevation because this is the soil that will provide lateral resistance to the system. You cannot just drill the holes and check the bottom.

## **Nu-Cable**<sup>®</sup> Cable Barrier Systems

## **INSTALLATION MANUAL**

SECTION N

APPENDIX: REPAIR & MAINTENANCE

REPAIR & MAINTENANCE	
Repeat Impacts	2
Releasing Tension	3
Cutting Cables	3
Pavement Overlays or Resurfacing	4
Emergency Access	4
Materials for Maintenance	



### **REPAIR & MAINTENANCE**

The Nu-Cable® System, regardless of installation method, is very easy to repair after an impact. The longitudinal elements (the cables) of the barrier will rarely need to be replaced. Visually inspect the cables, and if necessary, use cable splices to replace damaged cable.

Damaged posts and hook bolts should be replaced.

In the case of driven posts, the damaged posts must be removed and ground repaired before driving a new post.

After a significant impact it is recommended to check the tension. Also, check tension if an impact occurs close to an end terminal.



The many factors contributing to increased deflections can, in some instances, lead to maintenance and performance issues. The Nu-Cable® High-Tension System is a low-maintenance cable barrier system. Checking the tension of the cables on an annual basis, or after a severe impact, should be adequate. If impacted, a slack cable will result in increased lateral deflections. If the slack allows for a cable to become incorrectly positioned, the propensity for vehicle under-riding may increase. After all impacts, the system requires inspection and replacement or repair of damaged parts.

#### **Repeat Impacts**

High-Tension Cable barrier systems have shown capabilities of withstanding additional vehicular impacts on a damaged barrier. Due to the high tension, the cables typically do not fall to the ground as is the case with low-tension cable systems.

#### **Releasing Tension**

In certain circumstances, it may be necessary to release the tension in the system. Those may include the need to perform a repair, or a vehicle has become entangled.

There are three common ways to release the tension in the system.

2. Using a cable grip and a vehicle of

 On a short run, in a non-emergency situation, the easiest method to release tension is to open several turnbuckles to their maximum length<sup>1</sup>. This method allows the de-tensioning and the retensioning to be done with hand tools.



sufficient size, attach the cable grip to the longest end of the run not affected by the accident. Drive the vehicle towards the accident to release tension. A worker can then either take out a turnbuckle or cable splice, unscrew the terminal end connector from the CRP, or cut the cable.

- 3. Using a ratchet come-along (note capacity<sup>2</sup>) and two cable grips, pull the cable grips toward each other to release tension. Once tension is safely removed from the section of cable to repair, remove the nearest turnbuckle or cable splice, unscrew the terminal end connector from the CRP, or cut the cable.
- 4. In emergency situation, the CRPs can be longitudinally run over (slowly) with a truck. The CRPs will simply lay down and release the tension. The CRP posts can be reused. It will then be needed to replace the two 5/16" (8mm) breakaway bolts.

<sup>1</sup> Completely unscrewing the turnbuckle or cable anchor end, or unscrewing the cable splice at all, without first removing the tension can be unsafe. The cables will move rapidly when the threads strip out of the connection. This method is not recommended.

<sup>2</sup> Most construction come-alongs are only 2000# capacity. Capacity of come-along and cable grip must be equal or greater to the amount of tension in system. Typically 8000# to 12,000# capacity will be needed.

#### **Cutting Cables**

Although it can be done, cutting cables under tension should be done with caution. It is best to first release tension in the cables by using the turnbuckles if at all possible. A vehicle becoming entrapped in the system can create a higher-than-normal tension. In an emergency, the cables CAN be cut, by using great care, with an abrasive wheel



saw. Make sure no one is near the cutting point upstream or downstream. If cutting near a turnbuckle, remove adjacent posts. Use gloves and safety goggles and cut very carefully. Pay particular attention when there are only a few strands left, at the final stage of cutting. In worst case, use a bolt cutter with long handles.

#### Pavement Overlays or Resurfacing

Cable heights are critical to performance of the system. If the roadway has experienced an overlay, ensure cable heights are correct, and that the slope to the barrier does not exceed the maximum allowed. For significant overlays, it may be necessary to install extra-height posts.

Where it is anticipated that future roadway construction will require increases in the roadway surface elevation, a pro-active solution is to install extra-height posts in the original installation to allow for vertical adjustment of the cables. This option is only available in Test Level 3 systems.

#### **Emergency Access**

A temporary crossover for emergency vehicles or temporary traffic control can be made at any location of the installed cable barrier by removal of the special locking hook bolts and/or cable hanger straps, thus allowing the cables to slacken. The number of posts necessary for removal depends on the tension and temperature, but normally 15-40 posts will be enough. The weight of the cable will provide enough slack for passing over with vehicles.

#### Materials for Maintenance

Your NUCOR distributor carries an inventory of replacement parts for the Nu-Cable® System to facilitate quick repair of an impacted system. In addition, we recommend that DOTs or maintenance authorities keep a minimum quantity of repair parts on hand.

A general rule of thumb is to stock 2% to 4% of the total project, rounded up to the minimum order quantities (below).

Line Posts	=	50 piece bundles
Small Hook Bolts	=	100 pieces
Large Hook Bolts	=	50 pieces
Cable Hanger & Re	tainer	Strap
	=	50 Bundles
CRP/Trigger posts	=	3 or 4 pairs
Turnbuckles	=	3 or 4 pairs
Cable Anchor Ends	=	3 or 4 pieces
Cable Spool	=	2000 ft.

Please contact your distributor for up to date pricing on products.

## **Nu-Cable**<sup>®</sup> Cable Barrier Systems

## **INSTALLATION MANUAL**

SECTION P APPENDIX: CONTACT INFORMATION

CONTENTS



#### Manufacturer:

#### NUCOR Steel Marion, Inc.

www.nucorhighway.com

#### Corporate Headquarters

#### Steve Conway

District Sales Manager (800) 333-4011 ext. 260 Steve.Conway@nucor.com *Mailing Address:* 912 Cheney Ave. Marion, OH 43301

#### Manufacturer Representatives

#### Mark Fellows

District Sales Manager (740) 321-1273 Mark.Fellows@nucor.com *Mailing Address:* 912 Cheney Ave. Marion, OH 43301

#### **Chris Sanders**

Inside Sales Representative (740) 383-9637 Chris.Sanders@nucor.com *Mailing Address:* 912 Cheney Ave. Marion, OH 43301